


Uniqe characteristics



Backflow protection unit type EB

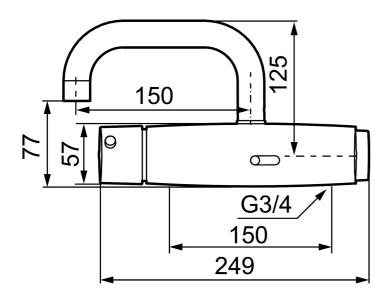

FM Mattsson tronic WMS, basin mixer, battery operation

Article number: 16502500 Description: Chrome

- WMS-mixers with possibilities of wireless connection (subscription is required)
- Adjustable hygiene flushing, intervals and rinsing time (to avoid stagnant water)
- Logging of all flushings with point of time, water consumption and temperature for individual mixer or group of mixers (minimum, maximum and average values)
- · Battery monitoring
- Built-in temperature measurements of mixed water temperature
- Programmable temperature stop, the mixer will turn off directly at set maximum temperature
- With mixing valve (but also provides cold drinking water as well as hot water only)
- · Soft closing solenoid valve
- · Safe against vandalism, complete in metal
- Eco (energy and water saving constant flow aerator, 5 l/min at 200– 600 kPa)
- · With fixed spout
- The mixer is activated by holding a hand in front of the sensor eye.
 Once started the mixer will run for at least 6 seconds and will continue to run as long as the hand is in front of the sensor.
- Flush Timeout safety shut-off to prevent flooding, maximum of 60 seconds
- 60 sec. rinse time via sensor
- · Can be turned off by solenoid valve (eg for cleaning)
- Low power consumption Long life
- · Equipped with system for thermal disinfection against legionella
- Battery operation, can be converted to mains operation
- IP class sensor, IP67
- Approved non-return valves, EN-Standard EN1717

Installation:

• Note! Gateway and a subscription is required for WMS

FM Mattsson

- · Automatic sensor calibration
- Easy to change battery, without turning off the water supply
- Mains operation requires installation of the AC adapter FMM S600132, and power supply FMM S600129 alternatively transformer FMM S600128


Settings:

- Adjustable max temperature
- With Gateway and WMS:
 - Hygiene flushing with adjustable time and intervals
 - Initiate hot water rinsing
 - Programming of rinsing times, temperature alarm och temperature stops
 - Alert signal if exceeding the time limit for stagnant water (the latest flushing)

PRODUCT DESCRIPTION

FM Mattsson tronic WMS, basin mixer, battery operation

Article number: 16502500

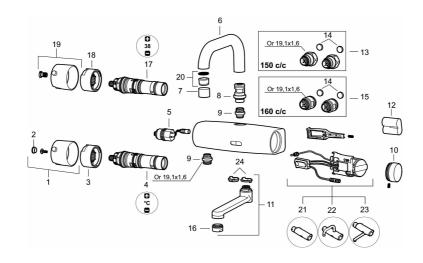

| Sparepartlist | | | | |
|---------------|----------|---------|----------------------------------------------------------|--|
| NO. | FMM NO. | RSK | DESCRIPTION | |
| 1 | 16221500 | 8438800 | On/off handle, complete (for basin mixer) | |
| 2 | 39030000 | 8295347 | End cover, chrome, 2 pcs | |
| 3 | 38525000 | 8218893 | Stop ring (for basin mixer) | |
| 4 | 16280000 | 8483159 | Mixing valve (for basin mixer), Lead Free | |
| 4 | 16280100 | | Mixing valve (for basin mixer) | |
| 5 | S600277 | 8398040 | Solenoid valve | |
| 6 | 58670000 | 8483157 | Spout, L=150 mm | |
| 7 | 29142200 | 8281524 | Housing M22 int. | |
| 8 | 16292000 | 8483161 | Nipple | |
| 9 | 39710800 | 8591967 | Nipple M18x1-G1/2 for shower mixer | |
| 10 | 16222600 | 8438816 | Cover plug for battery, black | |
| 11 | 32990000 | 8440588 | Spout | |
| 12 | S600135 | 8483191 | Battery | |
| 13 | 16291500 | 8438803 | Inlet connectors 150 c/c (left-handed thread) | |
| 14 | 16290000 | 8438802 | Filter, 2 pcs | |
| 15 | 16291600 | 8438804 | Inlet connectors 160 c/c | |
| 16 | 29301000 | 8439698 | Aerator M24 ext. | |
| 17 | 16281000 | 8218892 | Termostatic unit (for shower- and hospital mixer) | |
| 18 | 38515000 | 8218894 | Stop ring (for shower- and hospital mixer) | |
| 19 | 16211500 | 8438808 | On/off handle, complete (for shower- and hospital mixer) | |

FM Mattsson

| NO. | FMM NO. | RSK | DESCRIPTION |
|-----|----------|---------|-------------------------------------------------------|
| 20 | 29100500 | 8281532 | Aerator insert, 5 l/min at 200–600 kPa |
| 21 | 16216200 | 8438812 | Electronic unit WMS (for shower mixer) |
| 22 | 16216300 | 8438813 | Electronic unit WMS (for mixer with overhead spout) |
| 23 | 16216400 | 8438814 | Electronic unit WMS (for mixer with underlying spout) |
| 24 | 58643000 | 8394022 | Limitation segment (for mixer with underlying spout) |